



## Error Codes

## Commercial Split and Package System (PCA/PCG/SCA)

If the problem persists after performing the checks and diagnostics stated, turn off your unit immediately and contact ActronAir Service on 1800 119 229. Provide them with a detailed description of the unit malfunction as well as your products' model number.

### Indoor Unit

Outdoor CPU	C7 Wall Controller	Function / Fault
0	-	Cooling Mode
1	-	Cooling Mode - Normal
2	-	Cooling Mode – Compressor run time > 20 min
3	-	Heating Mode – Defrost
5	-	Heating Mode – Indoor Coil Pre-Heat
7	E7	Fault, open circuit outdoor coil sensor
8	E7	Fault, short circuit outdoor coil sensor
9	E9	Fault, High – Low pressure
-	E5	Communication error between outdoor and indoor

#### NOTES:

1. When unit is powered up, the first number shown on LED display will be CPU version number, then 8 followed by normal status codes.
2. Fault may not be displayed on the wall control unit until fault occurs several times.
3. LED indicator on Soft Starter (SS9) is on page 26. This SS9 is only for single phase units.

*That's better. That's Actron.*

