


## Wiring Connections

### LR7-1 and LC7-2 Wall Control Wiring Connections

#### WALL CONTROL WIRING

POWER: - BROWN / ORANGE  
 485 A: - BLUE  
 485 B: - BLUE-WHITE  
 GND: - BROWN-WHITE / ORANGE-WHITE  
 NOT USED: - GREEN / GREEN-WHITE

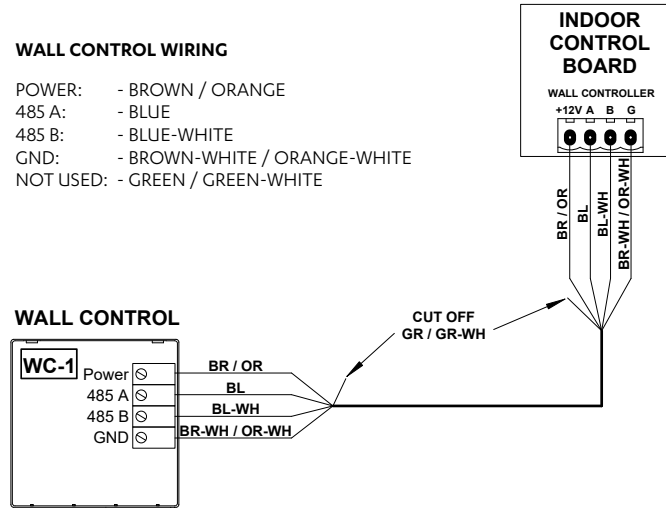


### NEO Wall Control Wiring Connections


#### NEO Hard Wiring

#### WALL CONTROL WIRING

POWER: - BROWN / ORANGE  
 485 A: - BLUE  
 485 B: - BLUE-WHITE  
 GND: - BROWN-WHITE / ORANGE-WHITE  
 NOT USED: - GREEN / GREEN-WHITE

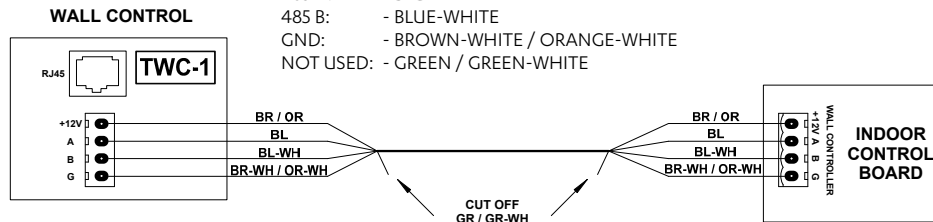

#### NEO RJ45 Wiring

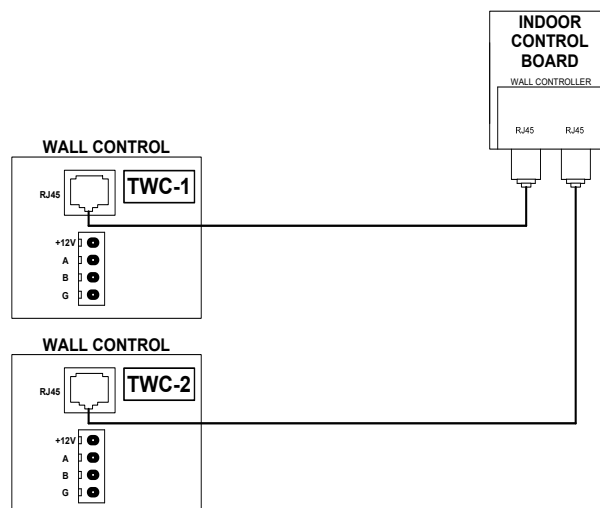


## LM-RS-2 Optional Sensor Wiring Connections

### REMOTE SENSOR WIRING

PAIR 1: - BLUE / BLUE-WHITE  
 PAIR 2: - ORANGE / ORANGE-WHITE  
 PAIR 3: - GREEN / GREEN-WHITE  
 PAIR 4: - BROWN / BROWN-WHITE

#### NOTE:

- PAIR 1 AND 2 USED FOR ILLUSTRATION PURPOSES ONLY.
- CUT OFF AND TERMINATE ANY UNUSED PAIRS TO ENSURE NO WIRING IS LEFT EXPOSED.

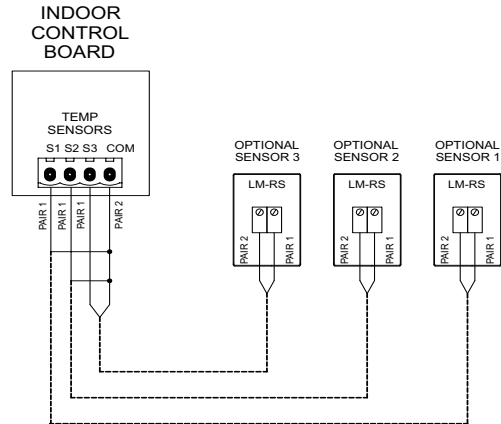

## AERSS Optional Duct Sensor Wiring Connections

### REMOTE SENSOR WIRING

PAIR 1: - BLUE / BLUE-WHITE  
 PAIR 2: - ORANGE / ORANGE-WHITE  
 PAIR 3: - GREEN / GREEN-WHITE  
 PAIR 4: - BROWN / BROWN-WHITE

#### NOTE:

- PAIR 1 AND 2 USED FOR ILLUSTRATION PURPOSES ONLY.
- CUT OFF AND TERMINATE ANY UNUSED PAIRS TO ENSURE NO WIRING IS LEFT EXPOSED.

