

## Indoor Commissioning Guide

Before activating the self-learn mode, ensure the following:

1. System should be in the OFF mode.
2. Ensure all connected zones are able to be turned on. If a connected zone cannot be opened, refer to Troubleshooting guide for more information.
3. Check the following:
  - Return air filter, box and grille are properly installed.
  - All doors or any other restrictions that may obstruct the air path back to the return and grille are open.
  - Adjustable outlets should be in open position and System Air Balance should be complete.

Initiating Self-Learn Mode (LR7-1 or LC7-2 Wall Control)

1. Press and hold the **FAN** button and **ON/OFF** button for 5 seconds or until the word **Lrn** appears on the display and release.
2. Press the **FAN** button once and release.
3. During operation of self-learn mode, **AUTO** will flash on the controller display.

### NOTES

- If a self-learn passes **PAS** will display on the wall control.
- If a self-learn fails, **FAL** will display on the wall control. Refer to service manual for troubleshooting.
- To return to Main Menu, press the **EXIT** button.
- To cancel Self-learn Mode, press **ON/OFF** button or press the **EXIT** button.

### Self-learn process for NEO Wall Controller

Follow the commissioning process in the NEO wall controller to complete self-learn.

### NOTES

- Self-learn Mode should be activated when there are no obstructions in duct system layout.
- Whenever system duct layout will be changed, self-learn mode should be reactivated. This will allow the controller to learn the new duct layout.