




IMPORTANT NOTE:

- This Outdoor Unit (CAY) is configured to match with the Standard Profile (EVY) indoor unit.
- Re-configuration is required, to match this unit with Low Profile (ELY) Indoor Unit, as follows:

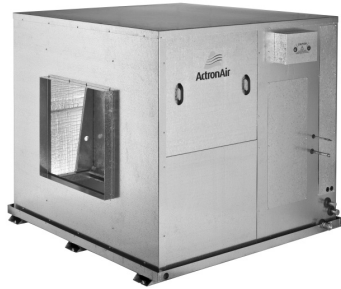

INDOOR UNIT (Standard Profile EVY)




INDOOR UNIT (Low Profile ELY)


1. Power-up the Control Interface

NOTE:

The screen will be blank for 45 seconds on the first Power-up, then the screen will display the ActronAir logo and after 3 seconds, the main screen will be displayed.

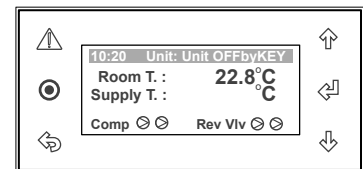


2. Press the “⊙” Button to open the Main Menu.

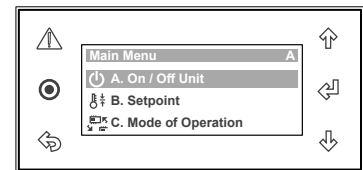


3. Press the “↓” Button to navigate to the Service Menu.

4. Press the “↵” Button to open the Service Menu.

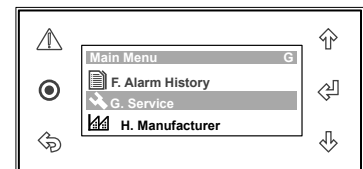


NOTE:


The Service sub-level menu will be displayed with highlighted first sub-level menu (“a. Change Language”).

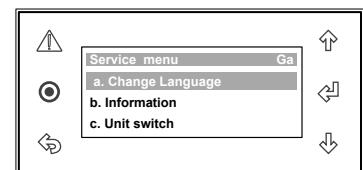

5. Press the “↓” Button to scroll down to “f. Service settings”.

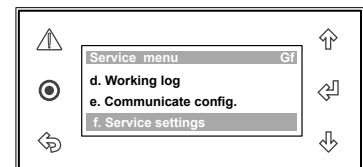

6. Enter the Service Password (7378) in order to access service settings.

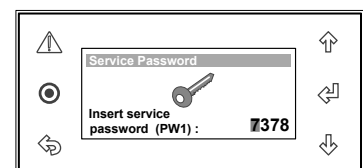

NOTE:

- CP05 displays are shown for illustration purposes.



NOTE:

Once in the Service menu, the “Service settings” sub-level menu will be displayed with highlighted first sub-level menu (“a. Working hour set”).

7. Press the “↓” Button to scroll down to “c. Thermoregulation”.

8. Press the “↵” Button to open “c. Thermoregulation”.

NOTE:

“Thermoregulation Gfc1” will be displayed.

9. Press the “↓” Button to scroll down to “S. Configuration Gfc12” & press the “↵” Button.

WARNING

- All user settings will be **LOST** if the Unit Series / Unit Model is changed.
- Ensure that settings are noted down for re-configuration.

NOTE:

The cursor “█” will appear next to “CAY”.

10. Press the “↵” Button twice to access “Unit Model” selections.

EXAMPLE:

Unit Model combination with Standard Profile Indoor Unit:
“CAY470T / EVY470T”

11. Pressing the “↑” Button to select the model of your Low Profile Indoor Unit.

EXAMPLE:

Unit Model combination with Low Profile Indoor Unit : **“CAY470T / ELY470T”**

NOTE: Check your indoor unit model number on the rating label and make sure you select the appropriate model combination in the controller. If your indoor unit model number includes 6Q2 then you must select CAY***T-6Q2 / ELY***T-6Q2 also for the system model number.

12. Press the “↵” Button to lock-in your “Unit Model”.

NOTES:

- The cursor “█” will appear and blink on the second Variation code.
- “D” is the default setting and cannot be changed.

13. Check the rating label to confirm if the system has variation code.

Ensure this variation code is also configured in the control interface.

EXAMPLE:

47kW OD Unit with coil coat (Variation K) & 3Ph Sequence Relay (Variation W)

CAY470T-6Q2-TA-KW (1st and 2nd Generation)

CAY470T-TA-KW (3rd Generation)

13. Press the “↵” Button to complete the unit configuration.

